

HEIGHT LINE

FOLD AROUND DOOR EDGE

$\frac{3}{8}$ " (10mm)

$\frac{3}{8}$ " (10mm)

OUTLINE OF BACK PLATE

1" (25mm)

$2\frac{3}{4}$ " (70mm)

$2\frac{1}{8}$ " (54mm)


CENTRE LINE OF LATCH

Fix this template in position on the locker door to ensure holes are drilled accurately.

Use for vertical, right handed and left handed horizontal fitting.

# 700 SERIES

LOCK INSTALLATION TEMPLATE

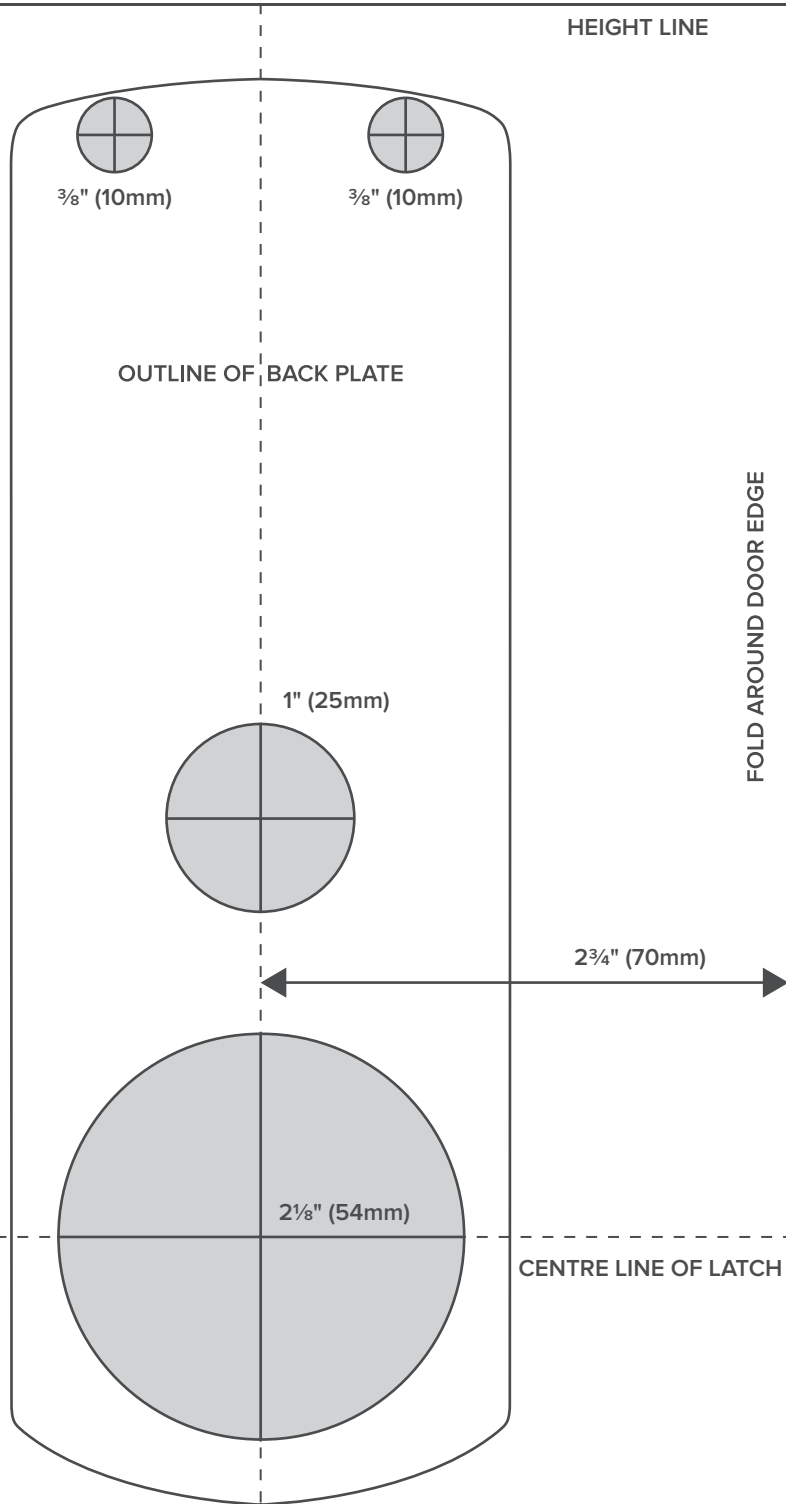

Fix this template in position on the locker door to ensure holes are drilled accurately.

Use for vertical, right handed and left handed horizontal fitting.

# 700 SERIES

LOCK INSTALLATION TEMPLATE